


FMP3 Watch

User's Manual



Special Warning:

1. Please do not use under the condition of moisture, dusty, high temperature or cold weather.
2. Please do not disassemble or repair by yourself, or guarantee will be void.
3. In this instruction, press and hold means press one button for about 2 seconds then releases, press quickly once means press one button for about 1 second then releases.
4. The earphone's cover of the player must be closed, otherwise the player will be damaged if water or duct enters the player carelessly.
5. Do not disconnect the USB cable while recording or transmitting files.
6. Do not use substitute USB cable, charger, driver and so on, other than those are accompanied with the player.
7. This product guarantee is only for hardware, loss of data by any condition is not included in the product guarantee.
8. During use of the player, when the player stops function, or is in abnormal condition, please connect it to the computer or the charger, and the player reset automatically, or hold EQ/REC button, and press PLAY/STOP button once time, to reset the player.
9. Please check if the RED light is on after connecting to USB port of the computer or the charger. If the light is not on, please check if the cable is properly connected, or reset the player as instructed above.

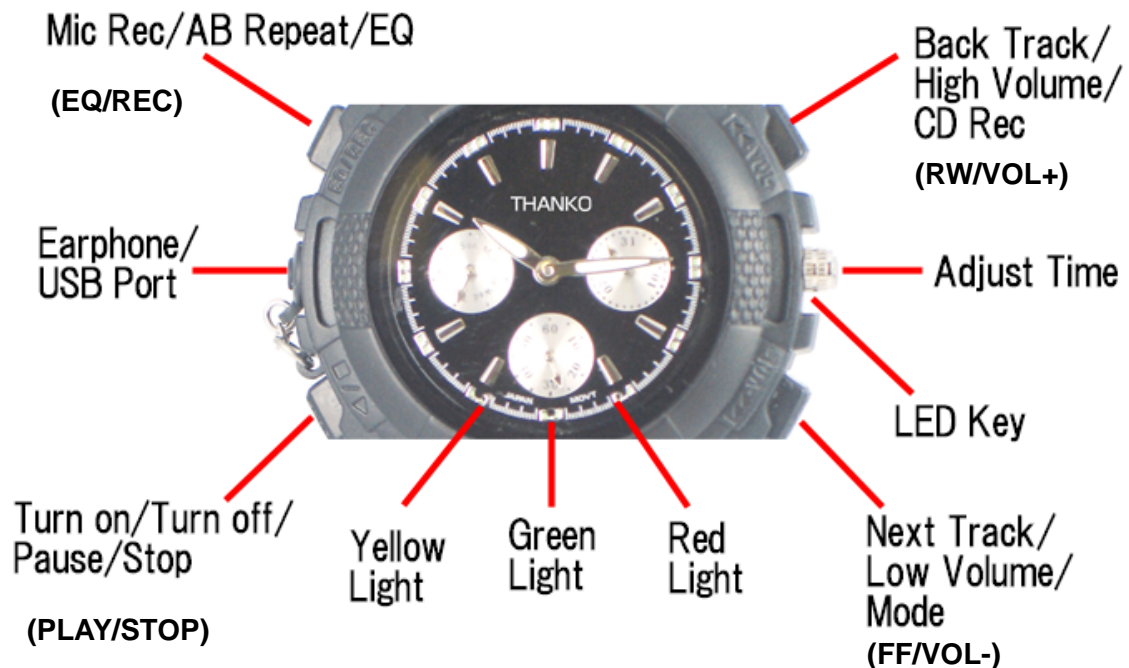

Indication Light Instruction

1. Charging: RED light is on, when finished, it turns to GREEN.

2. Transmitting files: RED light flashes, when finished, RED light is on.
3. MP3 status: GREEN light is on, MIC, LINE_IN status: YELLOW light is on.
4. Playing status: GREEN light flashes; Pause status: GREEN light flashes slowly.
5. Under low power using status: RED light flashes, after 5-10 minutes, the player will shut down automatically.

Operation Instruction

1. Turn On/Off

Turn on: Press PLAY/STOP button, and the RED, GREEN, YELLOW lights will flash at the same time, which indicates that you have entered in waiting status of MP3 music files play, then GREEN light is on.

Turn off: In waiting or playing status, press PLAY/STOP button for about 3-5 seconds, and after the RED light flashes, the player will be in shut down status, and turn off the power.

2. Switch among MP3 and recording status

In waiting status, press FF/VOL- button quickly to change the status. If the GREEN light is on, it is in MP3 status, if the YELLOW light is on, it is in recording status.

3. MP3 Play/Pause/Stop

- (1) Playing MP3 music file: When the GREEN light is on, press PLAY/STOP button quickly once, the player starts playing MP3 music file and the GREEN light flashes.
- (2) Pause: In playing mode, press PLAY/STOP button quickly once, the player pauses playing music, and YELLOW light flashes slowly, press once again, it continues.
- (3) Stop: In playing or pause status, press and hold PLAY/STOP button, the GREEN light is on, the play stops, and turn to waiting status. If you continue to hold, the player will shut down.

* The player will be shut down automatically after 3-5 minutes when there is no operation.

4. MIC Recording

- Recording: In stand by status, press EQ/REC button quickly once, YELLOW light flashes, and the player begin to record.
- Save file: In the course of recording, press EQ/REC button quickly once, the player stops recording, and saves recording file, and the YELLOW light is on.

5. Play Recorded File

In the status of YELLOW light is on, press PLAY/STOP button quickly once, the player starts playing recorded file. If there is no recorded file, press PLAY/STOP button is in vain.

6. LINE_IN Recording

- In waiting or pause status, after connecting line-in cable, press and hold RW/VOL+ button until the YELLOW and GREEN lights are on by turns, which indicates it is in LINE_IN Recording status.
- Save LINE_IN file: In the status of YELLOW light and GREEN light are on by turns, press EQ/REC button quickly once, and the recording stops, and saves recording file. When the YELLOW light is on, press PLAY/STOP button to play LINE-IN recorded file.

7. Track Selection

When playing music, press RW/VOL+ button to be return to the previous track, press FF/VOL- button to jump to the next track.

8. Volume Adjustment

When playing music, press and hold RW/VOL+ button to increase sound volume, press and hold FF/VOL- button to decrease sound volume.

9. A-B Repeat

In playing status, press EQ/REC button quickly once, YELLOW light is on, and set A as start point to repeat, press the button again to set B as end point to repeat. Press the button again, the YELLOW light will be off, to stop repeating.

10. EQ mode

In MP3 playing status, press and hold EQ/REC button, you can select 6 EQ musical modes in cycle.

11. Delete function

- Delete recording file

In the status of YELLOW light is on, press and hold EQ/REC button, three lights flash, and enters in delete files status. Press PLAY/STOP button to delete it. Press FF/VOL- button to cancel.

- Delete MP3 files

In the status of GREEN light on, press and hold EQ/REC button, three lights flash, and enters in delete files status. Press PLAY/STOP button to delete it. Press FF/VOL- button to cancel.

12. Low Power Indication and Charging

In using status, when the power is low, YELLOW light will flash, reminding user should charge player. If the player is not charged, it will shut down automatically. To charge the player, connect to a computer by USB

cable or to special charger included. When it is in charging, the RED light is on, when finished, GREEN light is on.

13. Memory Function

If the player is shut down properly, it will save the play settings including volume, EQ mode, and the last track being played before the shut down. When it is powered on again, it will extract the play settings and the last track played.

14. FM transmitter

In the status of MP3 playing, press LED key shortly, and flashing DARK GREEN light indicates that it is in the FM 88.1MHz transmitting mode. Turn on FM radio and tune to 88.1MHz frequency, and you will receive music from the player.



Press again LED key shortly, and flashing BLUE light indicates that it is in the FM 88.5MHz transmitting mode. Tune the FM radio accordingly.

Press again LED key shortly, and flashing ORANGE light indicates that it is in the FM 88.9MHz transmitting

mode. Tune the FM radio accordingly

Pressing LED keys shortly cycles 3 RF transmitting channels you can choose from.

Press and hold LED key (for 2-3 sec), to exit RF transmitting.

15. Computer Connection

- (1) When properly connected to a computer, the player is recognized as "Removable Disk".
- (2) Download MP3 files to the player.
 - The player supports DRM/WMA/MPEG1/2 layer3, with compression rate for 32Kbps to 320Kbps. Any other files are not supported for playback.
- (3) Upload files to computer
 - You can upload the files from the player to computer and play them in computer.
 - MP3 Player can also be used as flash memory disk to do so.

16. Driver installation

- (1) No driver installation is needed if the operating system is Windows ME or higher.
- (2) Driver installation on Windows 98SE
 - Insert the CD included to the CD drive, and execute setup.exe.
 - Complete the driver installation as directed in the menu and reboot the computer.
 - Connect the player to USB port of the computer with the USB cable.

Specifications:

Memory size: 512MB/ 1GB

Supported format: WMA, MP3, DRM+ Flash memory

MP3 compression rate: 32kbps to 320kbps

Port: 4 pin USB round port (for Earphone, USB, Charger, Line_In)

Battery: Built-in Hi Li-ion rechargeable battery (180mAh/3.7V)

Battery life: approx 9 hours continuous playing time when fully charged.

Recording: WAV format

Recording sampling rate: 44.1Kbps

Output frequency rate: 20Hz to 20KHz

SNR: >=90dB

Output power: 5MW+5MW(16om)

System platform: Windows ME/2000/XP

USB: USB2.0